



Geoscanners AB®



## DAB-601

The DAB-601 is a dual antenna splitter for antennas compatible with GSSI SIR® systems. It makes possible to operate one-channel radars in bistatic and monostatic mode depending on the amount of antennas connected. The switching between the two modes is done fully automatic and no intervention of the operator is required.

### ELECTRICAL SPECIFICATIONS:

Monostatic Operation Power Consumption	72 mW
Bistatic Operation Power Consumption	168 mW
TX Trigger Input Insertion Loss at 900 MHz	-0.12 dB
TX Trigger Input V.S.W.R at 900 MHz	1.15
TX Trigger Input -3 dB Bandwidth	3 GHz
Maximum TX Peak Voltage	+350 V
Switching Time to ON Status	20 mS
Switching Hysteresis to OFF Status	400 mS
Survey Wheel DC power Output <sup>1</sup>	5 V +/- 0.2 up

**Note 1:** The current consumption of the survey wheel encoder attached to this output should not exceed 200mA due to SIR-3000 output limitations, otherwise it supports up to 1A output.

### MECHANICAL SPECIFICATIONS:

Dimensions (LxWxH) mm/inch <sup>2</sup>	110x105.9x45.8 (mm) / 4.3x4.2x1.8 (inch)
Weight Kg/Lbs	0.2 kg / 0.44 Lbs
Ingress Protection Rating	IP51


**Note 2:** The length does not include the cable which is 300mm/11.8 inches long.

### ENVIRONMENTAL SPECIFICATIONS:


Maximum Temperature °C / °F	+40 °C / +104 °F
Minimum Temperature °C / °F	-10 °C / +14 °F
Maximum Humidity (non-condensing)	96% RH
RoHS Compliant	YES



**DAB-601 OVERVIEW**

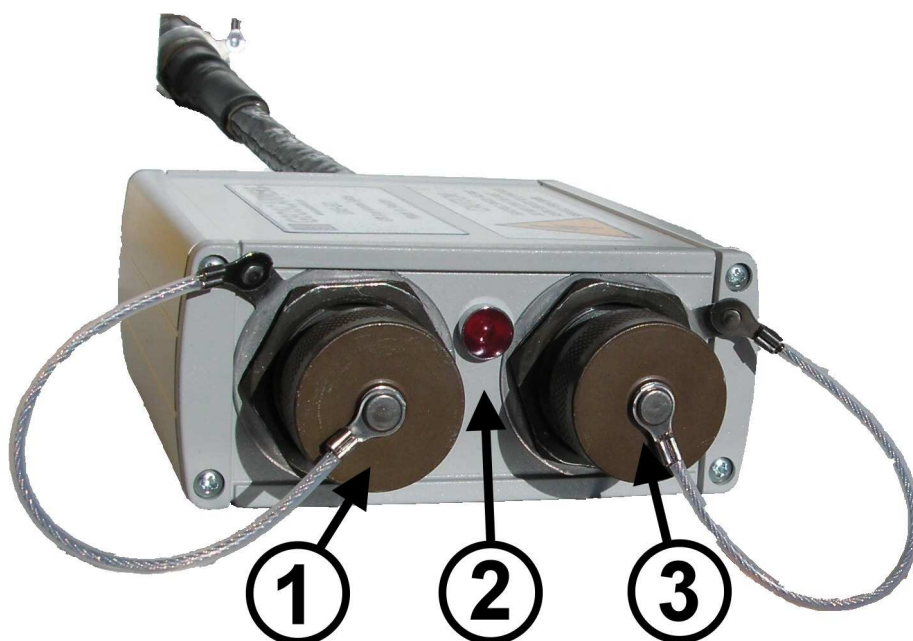

**DAB-601 FRONT**

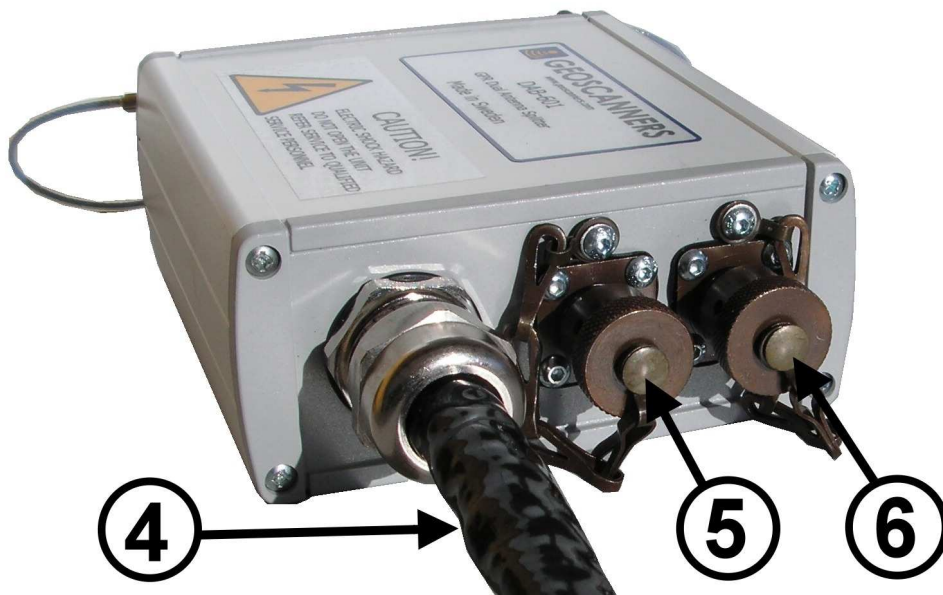

**DAB-601 BACK**

**OPERATING INSTRUCTIONS:**

1. Attach the control cable (4) from the DAB-601 to the radar unit.
2. Attach the control cable from the antenna that will be operating in transceiver or receiver only mode to the connector (3) on the DAB-601. If monostatic mode is desired then everything is ready, turn on the radar and proceed with the survey. For bistatic mode continue reading the instructions.
3. Attach the control cable from the antenna that will be operating in transmitter only mode to the connector (1) on the dual antenna splitter.
4. If everything is OK, then the LED (2) on the front panel of the DAB-601 should start flashing twice a second indicating bistatic mode. Now the antenna connected to output (1) is transmitting and the antenna connected to output (3) is receiving. Turn on the radar unit and proceed with the survey.
5. A marker button can be connected to input (5) in order to put markers in the collected data. Please note that a marker button connected to the antenna attached to output (3) will be still operational and the radar will accept inputs from both of the buttons if desired.
6. A survey wheel encoder can be attached to the antenna connected to output (3) or alternatively to input (6). It is not recommended to connect two survey

wheels simultaneously, conflicts may occur and the recorded position and distance most likely will be wrong.

7. The transmitting antenna connected to the output (1) of the DAB-601 can be hot unplugged. That means it is not required to turn off the radar to switch between monostatic and bistatic and vice versa. It is recommended to stop the acquisition though, so no voltage spikes are generated at the radar control output.
8. When the transmitting antenna is hot disconnected to switch to monostatic mode operation a delay of approximately half a second will occur. The unit goes back into monostatic mode when the LED turns off and it doesn't flash any longer.

## **TERMS OF USE:**

Geoscanners AB has made all reasonable efforts to ensure that all information provided through this document is accurate at the time of inclusion; however, there may be inadvertent and occasional errors for which Geoscanners AB apologizes.

Geoscanners AB accepts no liability for any inaccuracies or omissions in this document and any decisions based on information contained in this document are the sole responsibility of the reader. Geoscanners AB accepts no liability for any direct, special, indirect, or consequential damages, or any other damages of whatsoever kind, resulting from whatever cause through the use of any information obtained either directly or indirectly from this document.

This document may not be copied, reproduced, re-published, downloaded, posted, broadcast or transmitted in any way except for your own personal use. Any other use requires the prior written permission of Geoscanners AB. You agree not to adapt, alter or create a derivative work from any of the material contained in this document or use it for any other purpose other than for your personal use. You agree to use this document only for lawful purposes, and in a manner which does not infringe the rights of, or restrict or inhibit the use and enjoyment of this document by any third party.

This document and the information, names, images, pictures, logos and icons regarding or relating to Geoscanners AB, its products and services (or to third party products and services), is provided "AS IS" and on an "IS AVAILABLE" basis without any representation or endorsement made and without warranty of any kind whether express or implied, including but not limited to the implied warranties of satisfactory quality, fitness for a particular purpose, non-infringement, compatibility, security and accuracy.

In no event will Geoscanners AB be liable for any damages including, without limitation, indirect or consequential damages, or any damages whatsoever arising from use or loss of use, data, or profits, whether in action of contract, negligence or other tortious action, arising out of or in connection with the use of this document. Geoscanners AB does not warrant that the functions contained in the material contained in this document will be uninterrupted or error free, that defects will be corrected. The names, images and logos identifying Geoscanners AB and their products and services are proprietary marks of Geoscanners AB. Nothing contained herein shall be construed as conferring by implication or otherwise any license or right under any trade mark or patent of Geoscanners AB, or any other third party.

If there is any conflict between these Terms and Conditions and rules and/or specific terms of use appearing in this document relating to specific material then the latter shall prevail. If any of these Terms and Conditions should be determined to be illegal, invalid or otherwise unenforceable by reason of the laws of any state or country in which these Terms and Conditions are intended to be effective, then to the extent and within the jurisdiction which that Term or Condition is illegal, invalid or unenforceable, it shall be severed and deleted from this clause and the remaining terms and conditions shall survive, remain in full force and effect and continue to be binding and enforceable.

These Terms and Conditions shall be governed by and construed in accordance with the laws of Sweden. Disputes arising here from shall be exclusively subject to the jurisdiction of the courts of Sweden.

If these Terms and Conditions are not accepted in full, the use of this document must be terminated immediately.